


# TYCOKIT®

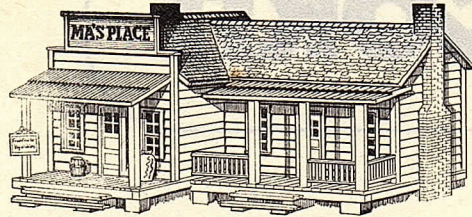

## 7779 MA'S PLACE

FOR BEST RESULTS \* READ THIS FIRST ...


This kit is molded of styrene plastic and for best assembly results use only cements designed for this material. Cement is not included in kit. Apply cement sparingly. Excess cement, particularly on the outside of your kit, may damage the details. Do not let the cement touch Eyes, furniture, or clothing. Carefully trim any excess plastic from the parts before assembling. This will result in better fitting components. Do NOT break parts from their sprues — always cut them apart — otherwise you will have a rough and discolored spot where the break-off occurs.

### STEP ONE

Since it is easier to install details on the walls when they are laying flat, begin by cementing 8 windows No. 1 into the wall openings, followed by rear door No. 2 and front doors No. 3. You can also cement onto the various wall sections some of the advertisements which are included with this kit.

### STEP TWO

To begin the actual assembly start from the bottom and work up. Take the base plate No. 4 and remove the pieces inside (chimneys) and set them aside. Next take the wooden floor section No. 5 and remove the inner pieces (steps and woodpile) and cement to the base No. 4, making sure that a good fit is obtained.

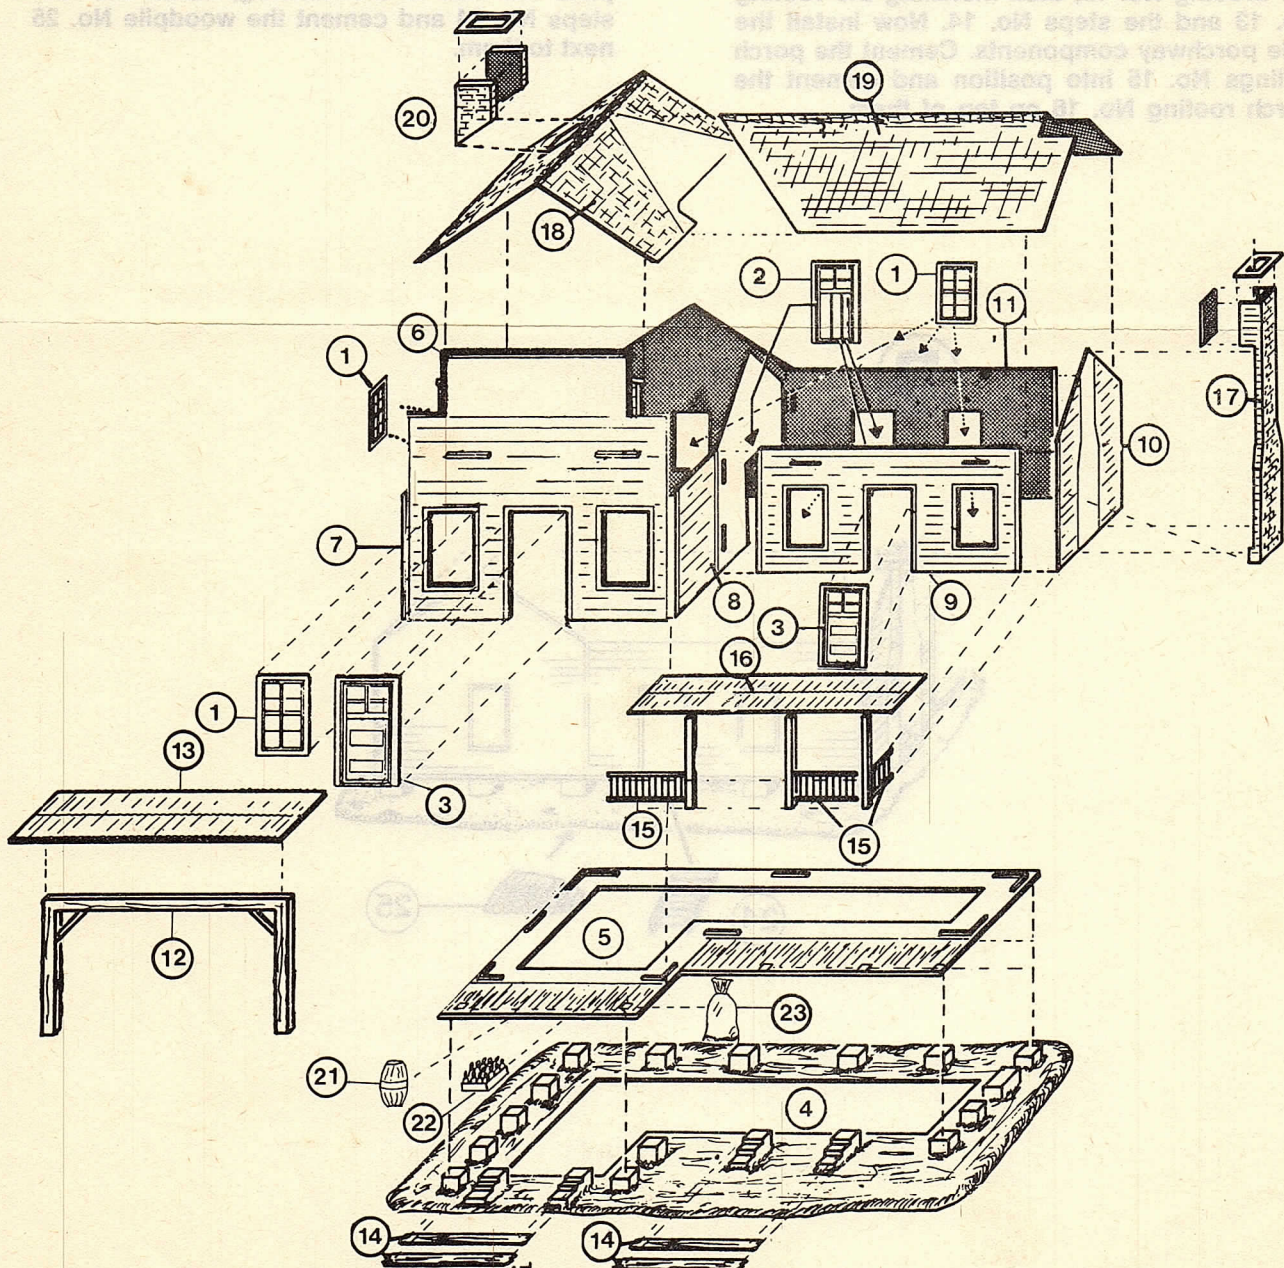

TYCO INDUSTRIES, MOORESTOWN, NEW JERSEY 08057  
A CONSOLIDATED FOODS COMPANY • RESPONSIVE TO CONSUMER NEEDS



## STEP THREE

Start to assemble the building proper by cementing the walls together, starting with the store front wall No. 6. It might be best to erect the store section first by cementing walls No. 7 and No. 8 to the front wall No. 6 and then adding the rear wall No. 11. Next, place what you have completed on the floor section No. 5 and when assured of a good fit, cement into place. Then continue to erect the walls around the flooring by adding walls No. 9 and No. 10.

## STEP FOUR

Now that the main building walls are up, install the front porchway components, starting with the bracing No. 12, then installing the roofing No. 13 and the steps No. 14. Now install the side porchway components. Cement the porch railings No. 15 into position and cement the porch roofing No. 16 on top of them.

## STEP FIVE

Carefully assemble the chimney components No. 17 as shown and when the chimney has set, place it into position against end wall No. 10. Fit and cement roof section No. 18 over the store portion, and follow through with roof section No. 19. When these pieces have set, assemble and install chimney components No. 20 as indicated in the drawing.

## STEP SIX

Basically, your building is now finished. It only remains for you to add the various accessories. Cement barrel No. 21, soda case No. 22 and sack No. 23 on front porch. Now to complete the rear of the building, install the rear steps No. 24 and cement the woodpile No. 25 next to them.

